


Figure 4

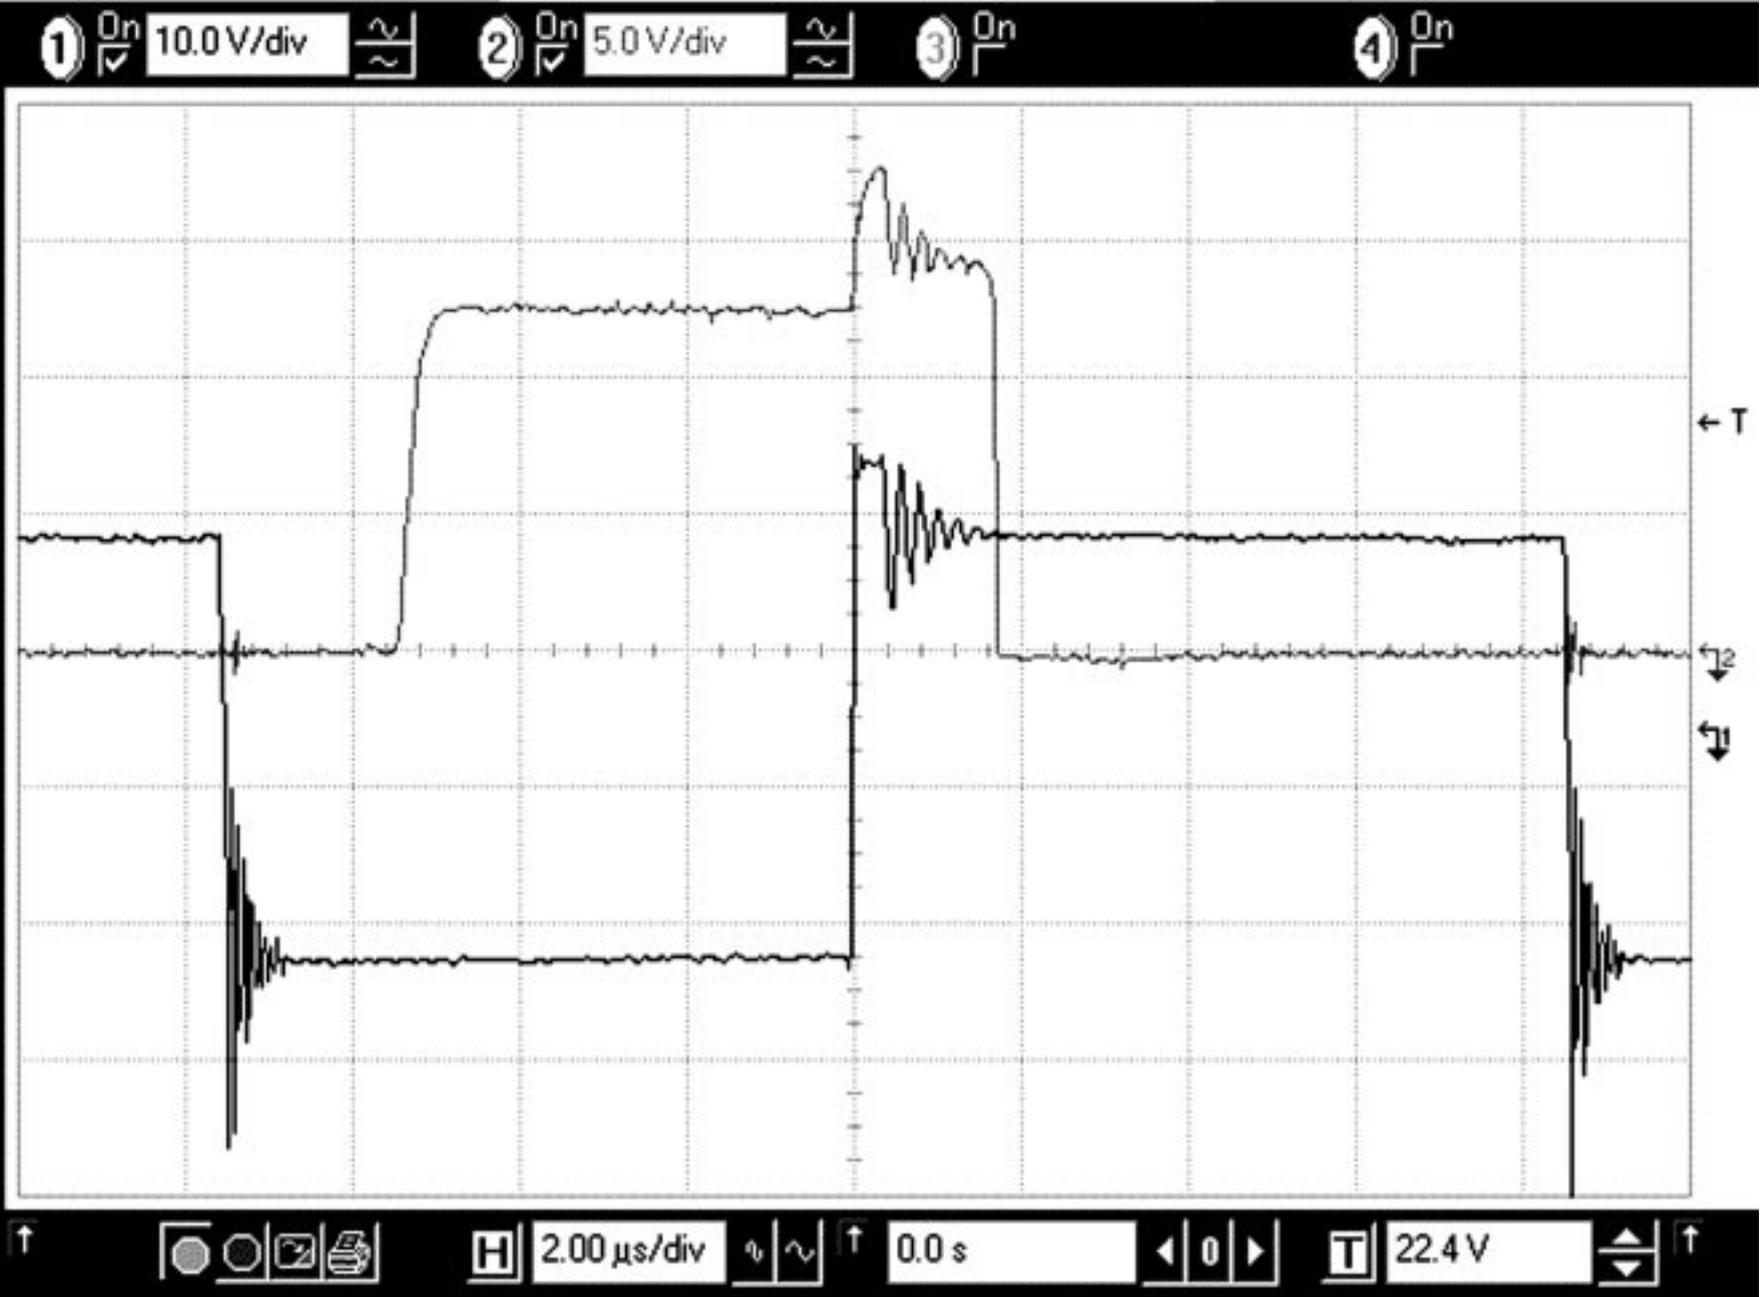

By delaying the sampling time, you obtain a clean auxiliary level that is devoid of any leakage-inductance effects.